



WI			
	REPORTED	ENGAGED	NO

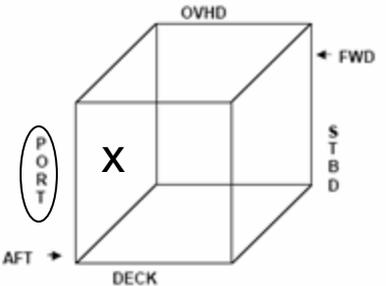


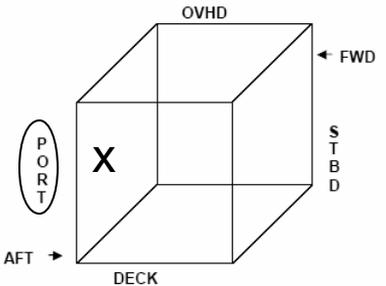
SOUNDS OF DAMAGE  
TRACK 2 MISSILE  
HIT


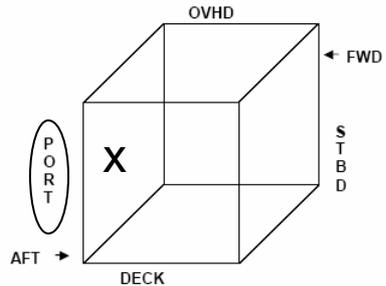
### REPORTED

### ENGAGED

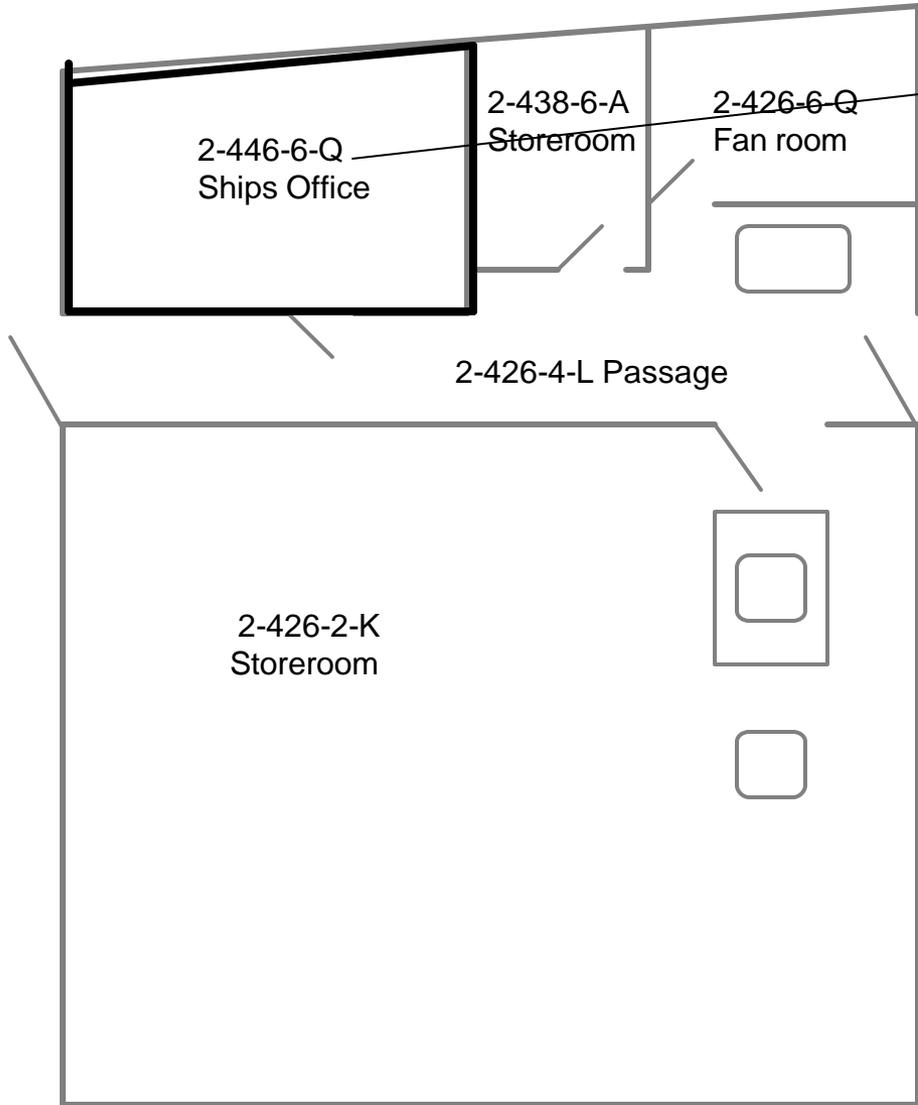
### NO

WI	TIME 1629	NUMBER 3
	FROM	TO
<input checked="" type="checkbox"/>	FM - INV (SL)	
	DCRS 2	
	DCRS 3	<input checked="" type="checkbox"/>
	DCRS 5	
	DCC	
	COMPT. #/NAME 2-446-6-Q	
	FRAME _____	
	REMARKS:	
		
<input checked="" type="checkbox"/>		
	BOUNDARIES	S P P S
	FB - SB - FLB - CB	

	TIME 1633	NUMBER 4
	FROM	TO
<input checked="" type="checkbox"/>	FM - INV (SL)	
	DCRS 2	
	DCRS 3	<input checked="" type="checkbox"/>
	DCRS 5	
	DCC	
	COMPT. #/NAME 2-446-6-Q	
	FRAME _____	
	REMARKS:	
		
<input checked="" type="checkbox"/>		
	BOUNDARIES	S P P S
	FB - SB - FLB - CB	

	TIME 1701	NUMBER 5
	FROM	TO
<input checked="" type="checkbox"/>	FM - INV (SL)	
	DCRS 2	
	DCRS 3	<input checked="" type="checkbox"/>
	DCRS 5	
	DCC	
	COMPT. #/NAME 2-446-6-Q	
	FRAME _____	
	REMARKS:	
		
<input checked="" type="checkbox"/>		
	BOUNDARIES	S P P S
	FB - SB - FLB - CB	

# Three different examples of manual plotting



WI  
1629

Line

2-446-6-Q

WI

1629

1633

Box

2-446-6-Q

~~WI~~

~~1629~~

~~1633~~

1701

Column

**REPORTED**

TIME 1629 NUMBER 3

FROM X TO

SCB1 X

SCB2

SCB3

SCB4

COMPT #NAME 2-446-6-Q

FRAME

REMARKS

3D Box Diagram: X

BOUNDARIES S P P S

FB - 30 - FLB - CB

**ENGAGED**

TIME 1633 NUMBER 4

FROM X TO

SCB1 X

SCB2

SCB3

SCB4

COMPT #NAME 2-446-6-Q

FRAME

REMARKS

3D Box Diagram: X

BOUNDARIES S P P S

FB - 30 - FLB - CB

**NO**

TIME 1701 NUMBER 5

FROM X TO

SCB1 X

SCB2

SCB3

SCB4

COMPT #NAME 2-446-6-Q

FRAME

REMARKS

3D Box Diagram: X

BOUNDARIES S P P S

FB - 30 - FLB - CB